

Installation Instructions

MODEL 857

For vehicles with air brakes

1. Horn should be mounted on top of cab and tilted slightly downward for best sound projection.
2. If cab is equipped with roof trim panel, remove to install horn.
3. Drill 1/2" and 9/32" holes (using gasket for a template) in position desired for horn base. Locate position for front support and drill 9/32" holes.
4. Place gasket between base of horn and top of cab roof and secure to roof with 2 screws, 2 lock washers, and 2 nuts.
5. Place gasket between base of support and top of cab roof and secure to roof with 2 screws, 2 lock washers, and 2 nuts.
6. Assemble lanyard valve and curved tension washer to horn.
7. Connect tubing from air supply to inlet on manual lanyard valve.
8. Punch hole in trim panel for valve lanyard. Lace lanyard through panel. Replace panel, fasten lanyard to convenient trim screw. (not included)

CAUTION: check local noise abatement ordinances to avoid legal violations.

Important – Use pipe compound on pipe threads to assure air tight connections

All Hadley products carry a limited warranty for 12 months from the date of purchase. We will repair or replace, at our option, defects in material and workmanship during that period when product is returned to our service department at the address below.


Hadley
Attn: Warranty Dept
2851 Prairie Street
Grandville MI, 49418

Service Department: (616) 249-8462
Hadley Main: (616) 530-1717
Fax: (616) 530-3283

www.hadley-products.com



MODEL H00857

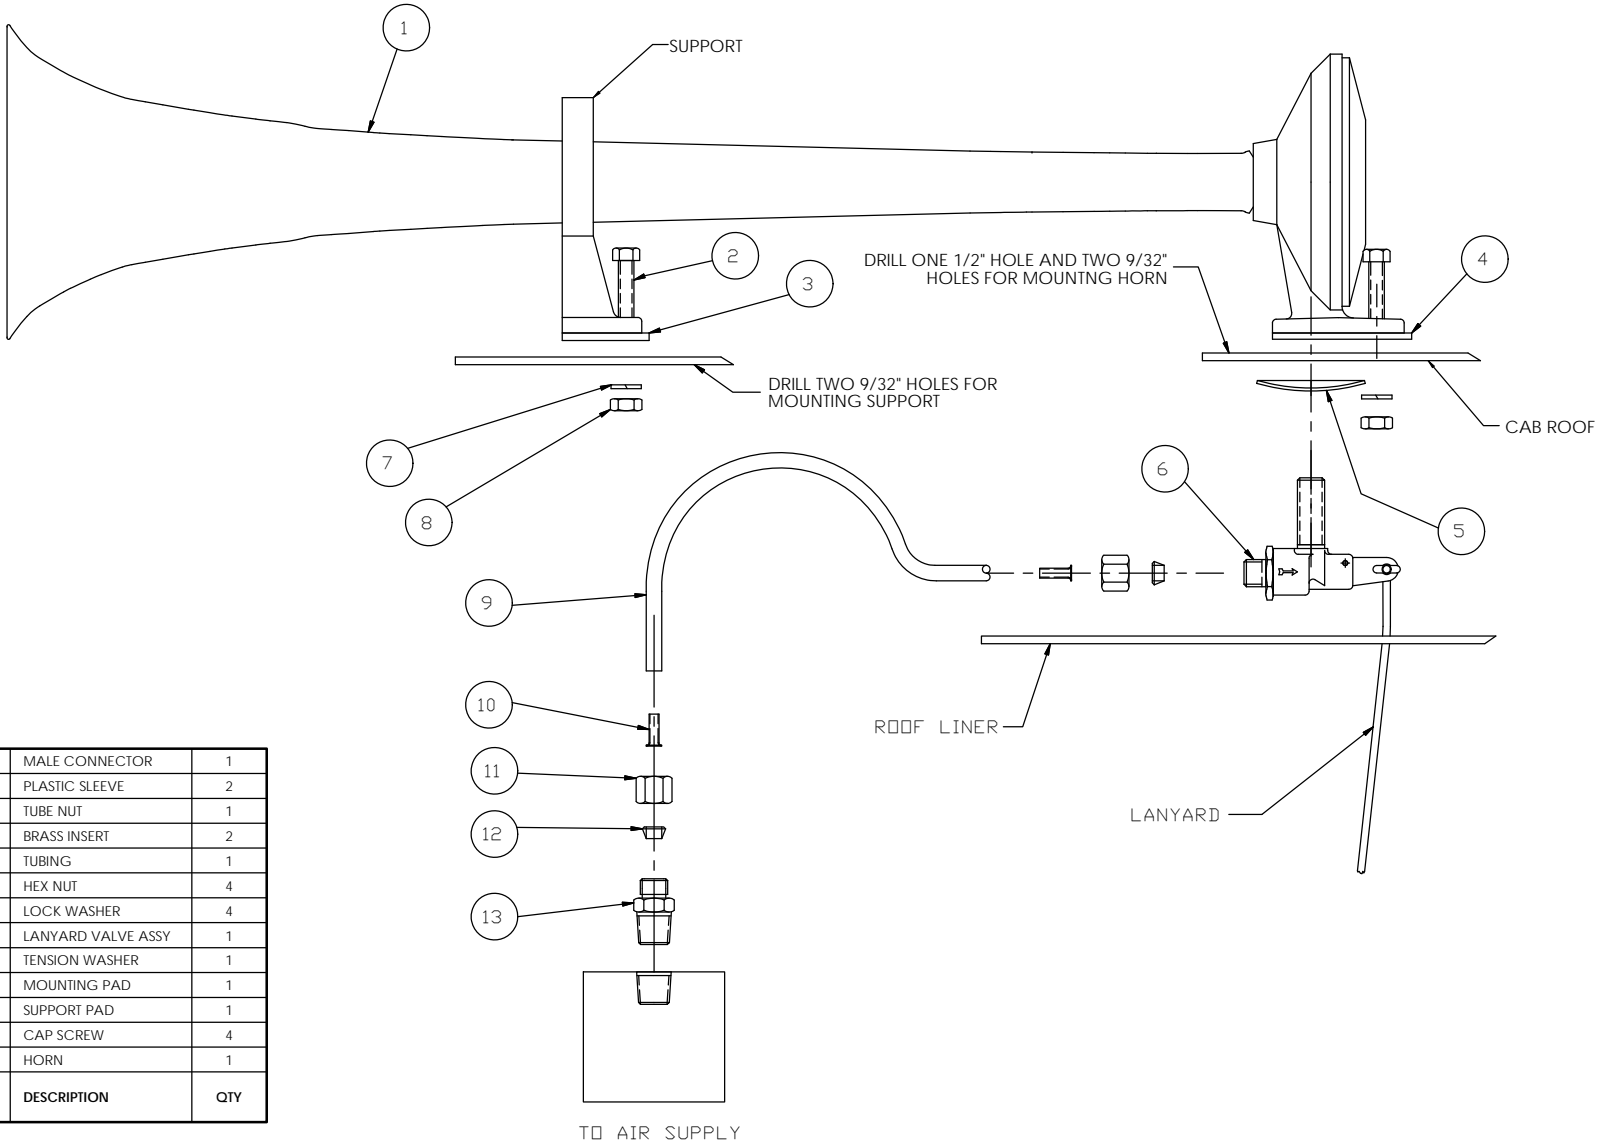

13	H11181	MALE CONNECTOR	1
12	H12463	PLASTIC SLEEVE	2
11	H11081	TUBE NUT	1
10	H12462	BRASS INSERT	2
9	H13110-1	TUBING	1
8	H11305	HEX NUT	4
7	H11306	LOCK WASHER	4
6	H00755-1	LANYARD VALVE ASSY	1
5	H11553	TENSION WASHER	1
4	H13727	MOUNTING PAD	1
3	H13724	SUPPORT PAD	1
2	H12801	CAP SCREW	4
1	H00855-0	HORN	1
ITEM	PART NO	DESCRIPTION	QTY